

FEATURES & BENEFITS



- **Solution Easy to operate**
- **⊘** Automatic start/stop function
- **⊘** Pre-wired with a 3-point plug
- **Output** Energy-efficient
- Up to 80% more energy savings compared to traditional pump systems
- **⊘** Restart delay

An integral time delay protects the motor from heat build-up due to continuous on/off switching

✓ Constant pressure


A pressure transducer ensures that constant pressure is maintained even when multiple water outlets are used simultaneously, within the capacity of the pup

⊘ Class leading efficiency

The unit has the following integrated functions for protection from:

- Dry run
- Over-current
- Over/under voltage
- Overload
- Abnormal Pressure

PUMP PERFORMANCE CURVE

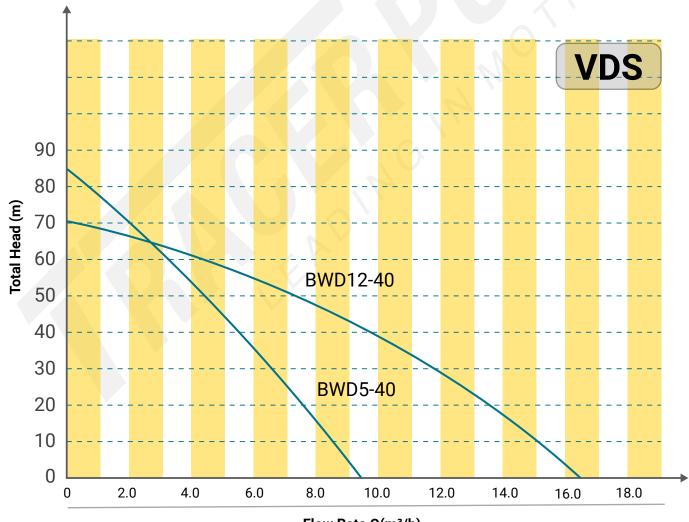

PUMP SPECIFICATIONS



Model	Power (Kw)	H.max (m)	H.rated (m)	Q.max (m³/h)	Q.rated (m³/h)	Speed. max (rpm)	Voltage (v)	Frequency (Hz)	In/Outlet (Inch)
BWD5-40	1.1	85	45	9.5	5	5000	220 ± 10%	50	1.25"×1.25"
BWD12-40	2.2	70	35	17	12	4500	220 ± 10%	50	2"×2"



Max. Fluid Temparature 80°C



Max. Ambient Temparature 40°C



- · Variable Speed drive (VSD) defined:
- The speed at which the pump runs varies as per the pressure requirements to ensure minimal energy is being used.



- · Unit intended for clean water usage, such as drinking water, or non-potable water piping system, as well as for irrigation purposes.
- Unit suitable for use with water temperatures ranging from 2 to 80 degrees celsius.

IMPORTANT INFORMATION

- The pump must be earthed.
- All the maintenance should be carried out with the power supply disconnected.
- Do not put any strain on the electrical cable.
- The pump is only designed for clean water use.
- Do not adjust any settings without having carefully read and understanding the instructions.
- Extending the cable will affect your factory warranty. Make use of an approved extending plug adapter.
- The pump should be installed in a ventilated, undercover area to protect the unit against direct sunlight, rain and spray from an irrigation system.
- Pumping muddy water or water containing suspended solids will severely reduce the life expectancy of the unit. Note that this type of application falls outside of the factory warranty.
- The booster pump is equipped with a draining screw at the bottom of the suction/discharge casing. It is advised to drain the unit when temperatures fall below 0°C.

OPERATING INSTRUCTIONS

- 1. Ensure that the power supply cable is connected correctly.
- The suction and discharge piping should be of rigid characteristics, be able to withstand pressure of up to 6 bar, be air tight on the suction side and water tight on the discharge side.
- 3. Follow the priming instructions as per diagrams.
- 4. The booster pump is designed to operate with a 220V single-phase power supply. Voltage variance is maximum 10% up or down. Further variation will damage the electrical motor.